



hellocake.com

 
TIPS AND TRICKS

Whether you're new to external toys or just adding to your collection, the best move is to experiment and see what feels good. Here are a few tips to get you started.

Think of your wand like a massage. Ease into it. Begin on the lowest setting and work your way up the different intensities to find your favorite setting.

Instead of pressing straight on, experiment with holding your wand at different angles or flip the side of the head. The neck flexes to give you different levels of pressure and sensation.

Wands aren't just for solo sessions, they're perfect in partnered play. Try holding it between you during sex or letting your partner take control.

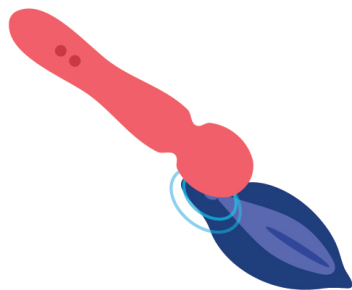

TECHNICAL DATA

Product name: Flexible Wand

Material: Body-safe silicone, ABS

Charging method: Magnetic charging

Vibration: 5 speeds, 5 vibration modes

Size: 7.3 in L x 2.24 in W

Weight: 5.7oz

Waterproof: IPX6

Battery capacity: 500mAh

Max charging voltage: 3.7v

Charging time: About 120 minutes to full charge

Use time: About 120 minutes on low, about 60 minutes on high

Noise level: ≤55dB

DISPOSAL INFORMATION

The crossed-out dustbin symbol indicates that this product should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.

 


CONTACT HELLO CAKE

If you ever have any questions, comments, or concerns about any of Hello Cake's products, reach out to us at hello@hellocake.com. We want to hear from you!

Designed and developed in Las Vegas, NV.
Manufactured in China.

hello
cake

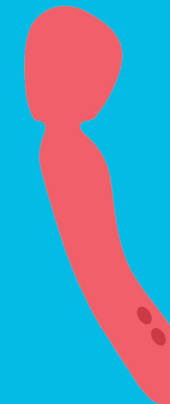

flexible wand user manual

hello
cake

flexible wand user manual

WARNINGS


Please read and save these instructions

- Keep out of reach of children and pets.
- Remove any jewelry before use.
- The Flexible Wand is waterproof, but not designed for extended use in the bath, shower, or pool.
- Prolonged use is not recommended. If the motor becomes warm, discontinue use and allow to cool before resuming.
- Store in a cool, dry place, away from direct sunlight, humidity, or extreme temperatures.
- This product contains a lithium-ion battery.
To prevent fire or injury:
 - Do not crush, puncture, or disassemble.
 - Avoid dropping or exposing to impact.
 - Do not short-circuit or allow metal objects to contact the charging port.
 - If the device is damaged or swelling occurs, discontinue use immediately and dispose of safely.
- To avoid injury or aggravation of a pre-existing condition, this device should not be used on swollen or lacerated areas of the skin.

BEFORE YOU PLAY | introduction

Your brand new Flexible Wand is designed for more satisfying sessions and to add a new element of fun! It's easy to get started but there are a few signature moves and some tips that we want you to know.

MEET N GREET | product diagram

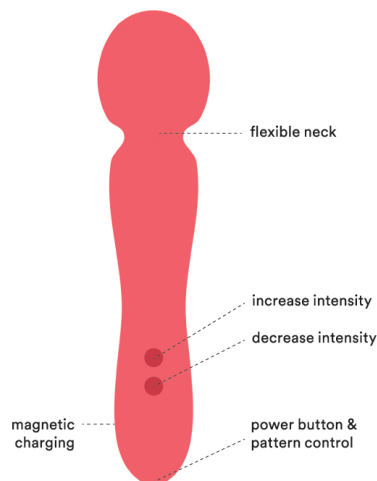 

KEEP IT CLEAN | cleaning

Always clean your toy before and after play. Use a cleaner made specifically for intimate devices such as Hello Cake's **Toy Cleaner**, or wash with warm water and mild soap. Pat dry and let it air dry fully before storing. Avoid alcohol, petrol, or acetone-based cleaners—they can damage your toy.


GET IT ON | charging

Before you can get down, you've gotta charge it up.

For best results, give your Flexible Wand a full 2-hour charge before first use.

On the base, you'll see two waterproof magnetic contacts (the little metal circles). Snap on the provided USB cable—it'll click into place.

Plug the other end into any USB port. While charging, the power button blinks. Once the light turns solid, your Flexible Wand is ready to play.

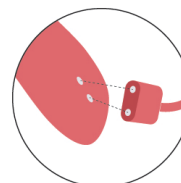

LUBE IT UP | preparation

A little lube makes everything smoother. We recommend Hello Cake's **Toy Lube**—drip-free, water-based, and made for toys.

Want more sensation? Add Hello Cake's clitoral pleasure serum, **Tingle to Mingle**, for an extra spark.



USE YOUR TOY | operating

Press and hold Flexible Wand's power button for three seconds to turn the device on and off.

Press the power button again to cycle between the 5 speeds and 5 patterns. The first time you play, try them all out to find your favorites.